

## **TO PRINT METER READING ON A CANON PLOTTER\***

**Go to the SETTINGS MENU**

**Press the Down Arrow under OK button until “TEST PRINT” is highlighted – press OK**

**Press the Right Arrow until “STATUS PRINT” is highlighted\***

**Press the Right Arrow again, then Down Arrow for YES**

**Click OK button to print status report prints**

**\*For an IPF750, you will need to Press the Down Arrow to access “STATUS PRINT” – then press OK to print.**

**The information needed is in the lower right corner under Cutter: 1 Media section (Life TTL sq. ft. Reading).**

**\*For an IPF765, Select Menu button. Right arrow to last icon and reading will display on screen.**