



Converting a Trimble .DAT or T01 File to a RINEX File for Non Trimble Geomatics Office Users

Download and install the utility from http://www.trimble.com/trimblerinex_ts.asp.




Once the utility has been installed, click on the icon on your desktop.

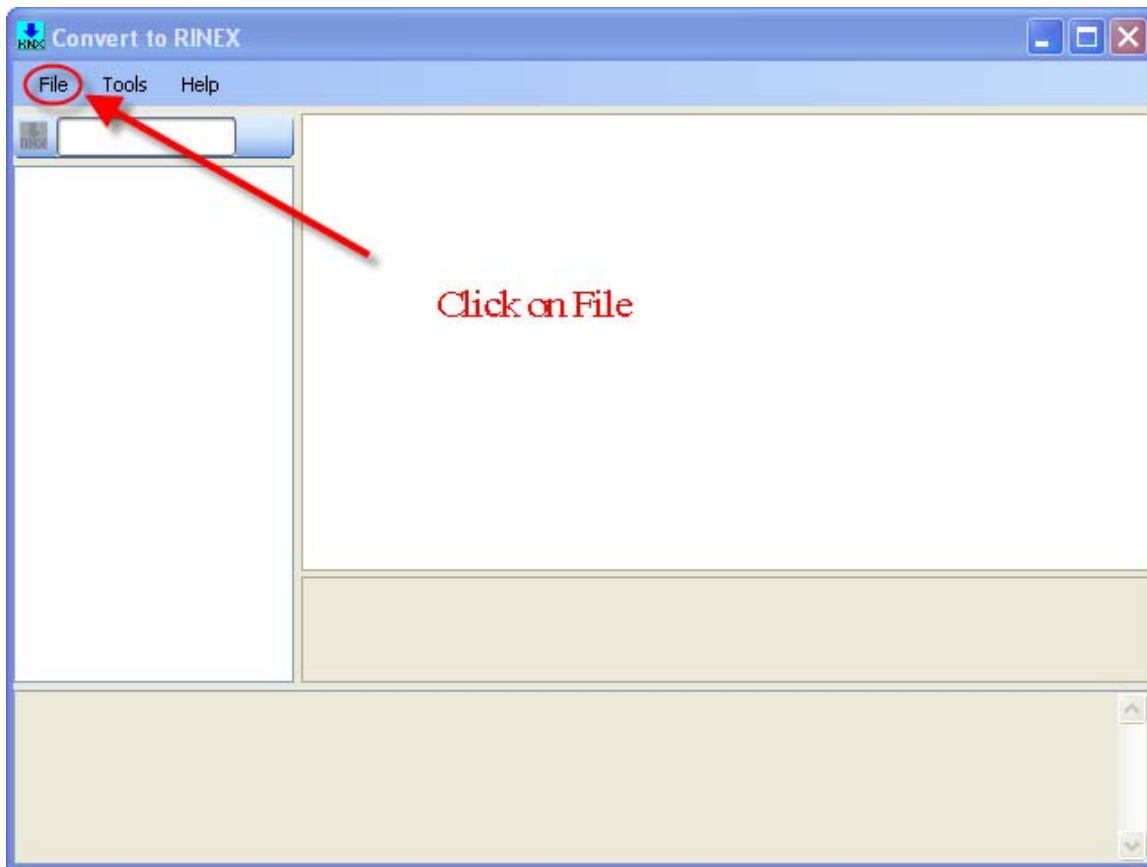


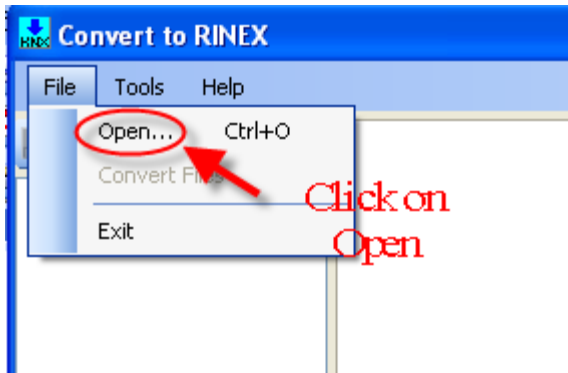


Navigate to where you downloaded the DAT or T01 files on your computer.

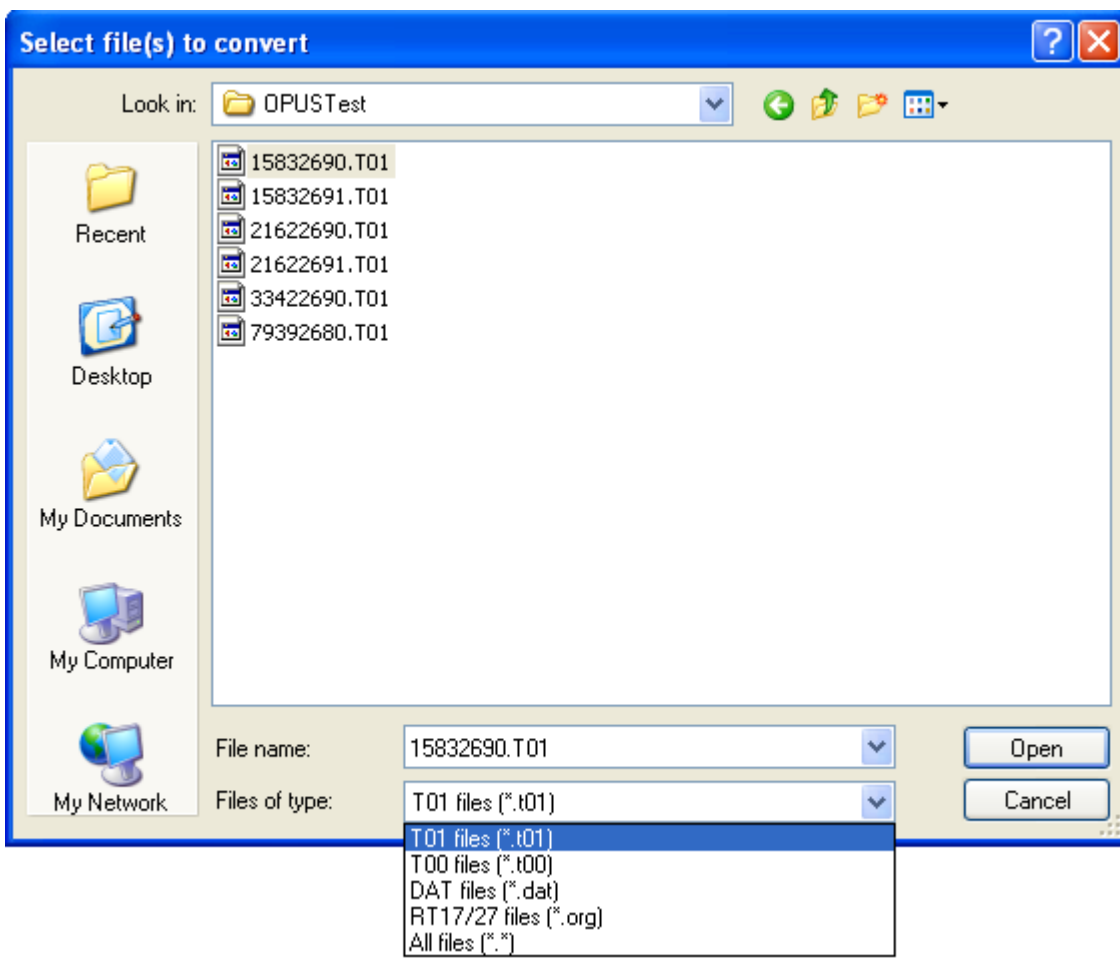


Use the Look in dialog to find the location of your file. Choose your file type. Select your file and click on Open.

Once the file loads, click on file.

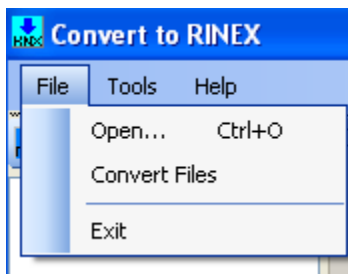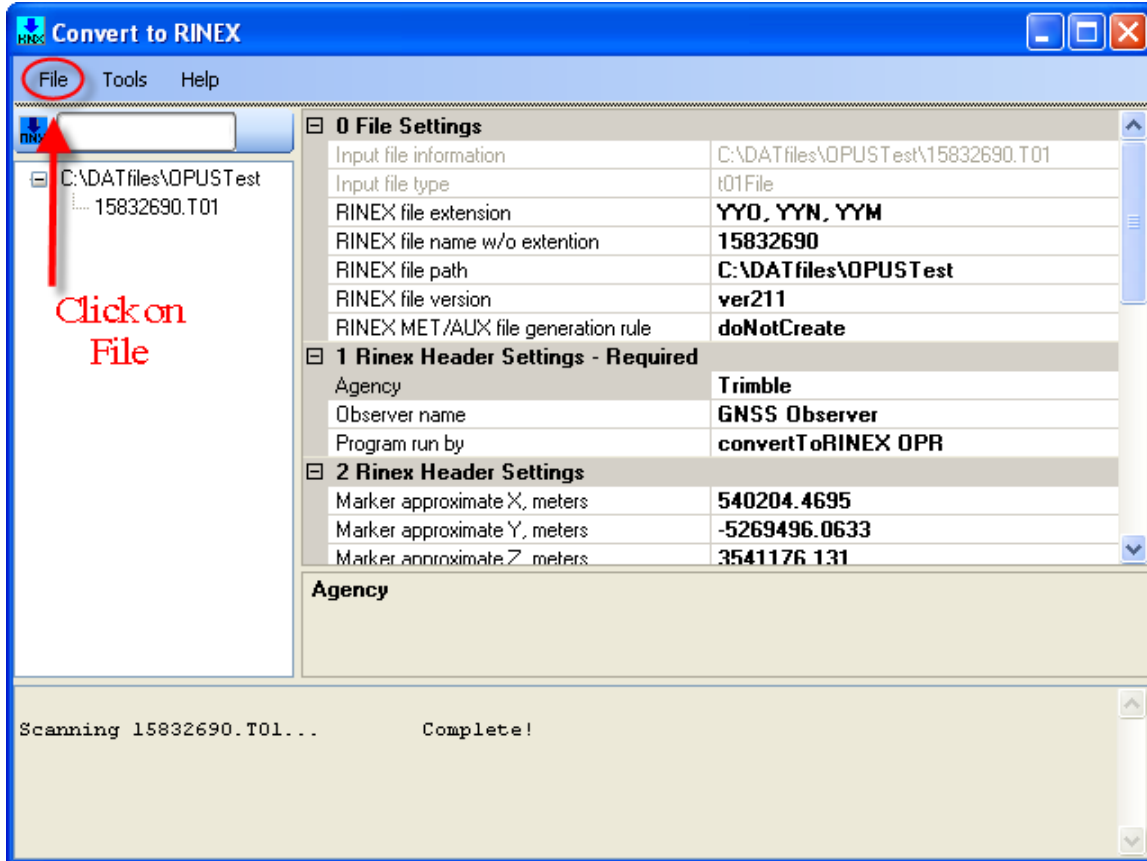


Click on Convert Files.

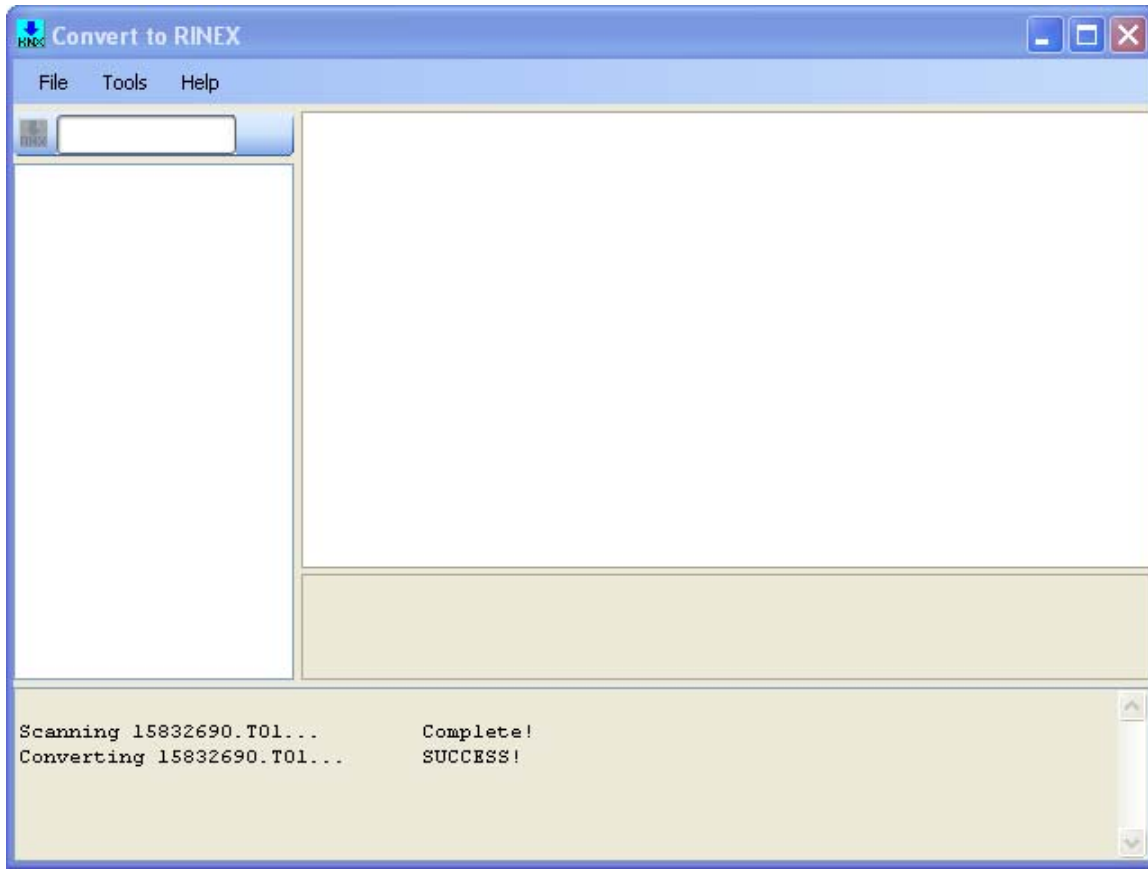

The message at the bottom of the screen tells us it was converted successfully and stored at the location of the original .DAT or .T01.

Navigate to where the Rinex file was stored on your computer.

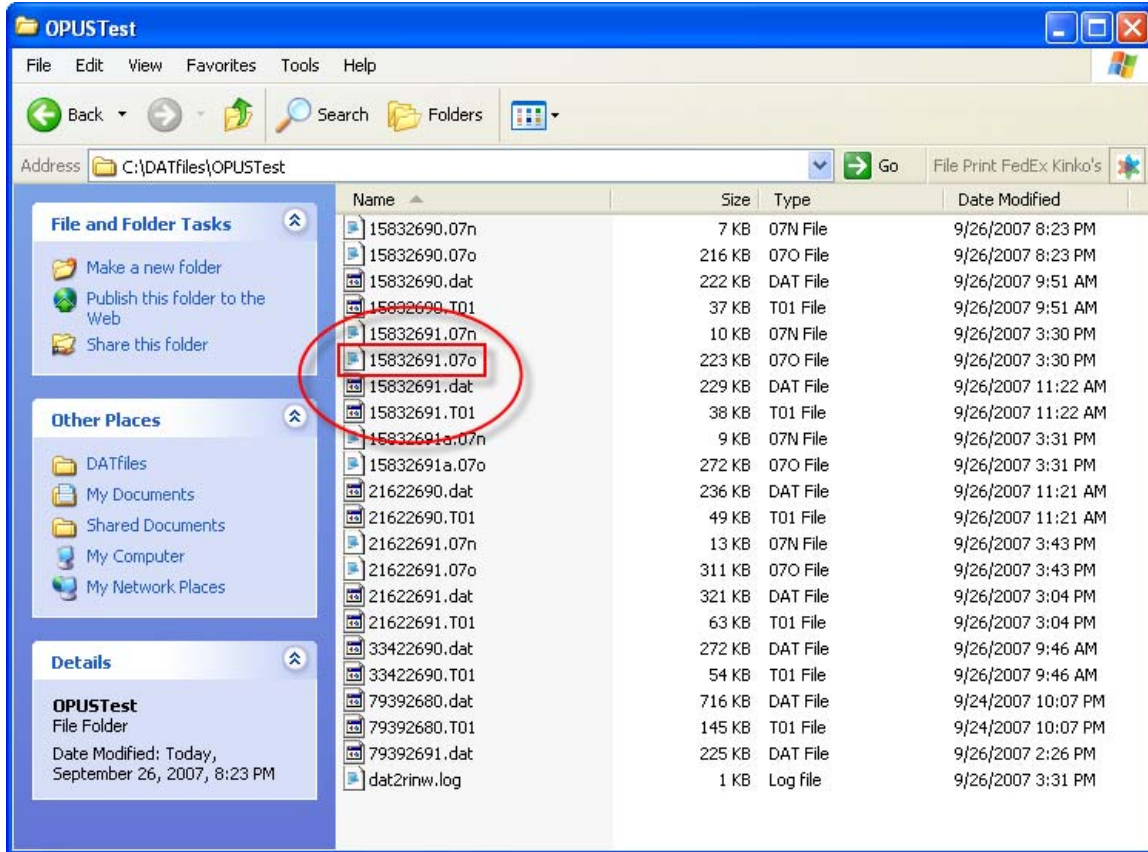

Send the .07o file to OPUS.